

# **Model A5000 Spray Gun Parts List**

## **January 1, 2002**

<b>Diagram #</b>	<b>Part #</b>	<b>Description</b>
1	A5200	Air cap ring
2	A5201	Air cap # 1
2	A5297	Air cap # 2
3	A5203	Air distributor plate (stainless)
4	A5204	Air distributor spring (stainless)
6	A5206	Fluid nozzle/jet (stainless) .75MM
6	A5207	Fluid nozzle/jet (stainless) 1.00MM
6	A5208	Fluid nozzle/jet (stainless) 1.50MM
6	A5208-2	Fluid nozzle/jet (stainless) 2.00MM
6	A5209	Fluid nozzle/jet (stainless) 2.50MM
7	A5210	Fluid nozzle gasket
8	A5211	Air feed connector
9	A5212	Gun casting (main body)
10	A5213	Trigger bushing
11	A5214	Trigger pivot screw (stainless)
12	A5215	Trigger screw washer
13	A5202	Air blanking plug
13a	A5257	Air control texturing valve
14a	A5216	Upper port insert
14b	A5217	Air blanking plug
15	A5218	Needle (stainless) .75MM
15	A5219	Needle (stainless) 1.00MM
15	A5220	Needle (stainless) 1.50MM
15	A5220-2	Needle (stainless) 2.00MM
15	A5221	Needle (stainless) 2.50MM
16	A5222	Needle spring (stainless)
17	A5223	Flow screw insert
18	A5224	Material flow adjusting screw
19	A5225	Gun casting (handle)
20	A5226L	Handle tube
21	A5227	Air hose quick release coupler (male)
22	A5228	Gland seal
23	A5229	Gland seal (stainless)
24	A5230	Trigger (stainless)
25	A5232	Air feed tube and non-return valve
26	A5231	Cup top bolt (stainless)
27	A5233	Cup top casting
28	A5236	Cup top disc (stainless)
29	A5235	Cup top nipple (stainless)
30	A5237	Nut - Cup top bolt (stainless)
31	A5242	Material pick-up tube (stainless)
32	A5238	Cup top gasket (Ethafoam)
32	A5239	Cup top gasket (Cork)
32	A5240	Cup top gasket (Neoprene)
32	A5241	Cup top gasket (Vegetable fibre)
33	A5243	Material tube nut (stainless)
34	A5244	Screw paint cup (quart)
34	A5245	Screw paint cup (quart) Teflon lined