



**ApolloSpray A5605
Production Spray Gun
Diagram & Parts List
760-727-8300**

Diagram #	Part #	Description	Diagram #	Part #	Description
1	A5200	Air cap ring	13	A5217	Air blanking cap
2	A5201	Air cap # 1	14	A5218	Needle (stainless) .75MM
2	A5297	Air cap # 2	14	A5219	Needle (stainless) 1.00MM
3	A5203	Air distributor plate (stainless)	14	A5220	Needle (stainless) 1.50MM
4	A5204	Air distributor spring (stainless)	14	A5220-2	Needle (stainless) 2.00MM
5	A5212	Spray Gun Body	14	A5221	Needle (stainless) 2.50MM
6	A5206	Fluid nozzle/jet (stainless) .75MM	15	A5222	Needle spring (stainless)
6	A5207	Fluid nozzle/jet (stainless) 1.00MM	16	A5523	Flow screw insert
6	A5208	Fluid nozzle/jet (stainless) 1.50MM	17	A5224	Material flow adjusting screw
6	A5208-2	Fluid nozzle/jet (stainless) 2.00MM	18	A5259	Air blanking plug
6	A5209	Fluid nozzle/jet (stainless) 2.50MM	19	A5260	Air valve assembly
7	A5210	Fluid nozzle gasket	20	A5261	Air coupler 1/4 NPT brass
8	A5246	Air feed blanking screw (stainless)	21	A5228	Gland seal
9	A5213	Trigger bushing	22	A5229	Gland nut (stainless)
10	A5214	Trigger pivot screw (stainless)	23	A5230	Trigger (stainless)
11	A5215	Trigger screw washer	24	A5254	Fluid connector, 3/8" (stainless)
12	A5216	Upper port insert			